

E MOTORAD

DOPE

QUICK START GUIDE



www.emotorad.com

DOPE



TABLE OF CONTENT

01.	Introduction _____	03
02.	The Tool Guide _____	04
03.	Unboxing & Assembly _____	05
04.	Features _____	08
05.	Care for Your E-Cycle _____	10
06.	Operating the Battery _____	12
07.	Operating the Display _____	14
08.	A Note on Wear and Tear _____	16
09.	Periodic Service Checklist _____	17
10.	Warranty Cover _____	19
11.	E-Cycle Range _____	25
12.	Safety Guide _____	26

INTRODUCTION

Hey there, rider!

Welcome to the world of e-cycling with EMotorad Dope!

We're excited to have you join our tribe of riders who are not just embracing urban mobility, but also doing so in style. This manual is designed to help you assemble your electric cycle and get to know its features so you can fully enjoy your riding experience. Safety is our top priority, so please read this manual carefully before you start pedalling. If you have any questions or need assistance, don't hesitate to contact our customer support team.

Happy riding!

Scan the QR Code

to set up your e-cycle and download the user manual.




THE TOOL GUIDE


Tools you must keep handy before assembly:

- A Pair of Scissors (Not Included)
- Kit Box (Included)


KIT BOX

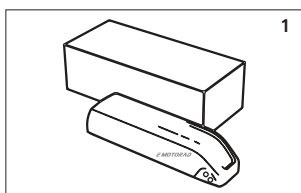


Battery Box

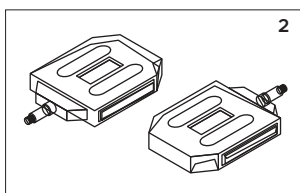


Pair of Pedals

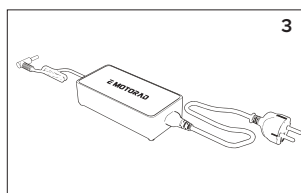

Charger

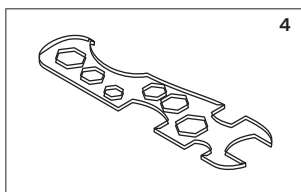


Multi Spanner

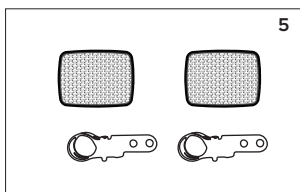

Front and Rear Reflector




Allen Keys
(3mm, 4mm, 5mm, 6mm)

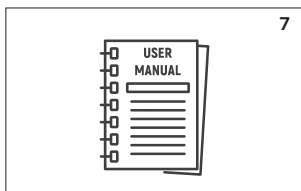



User Manual

UNBOXING & ASSEMBLY




- Open the box and take out the e-cycle, accessories and battery box from the main box, including the front wheel. Remove all the protective wrapping from the e-cycle.

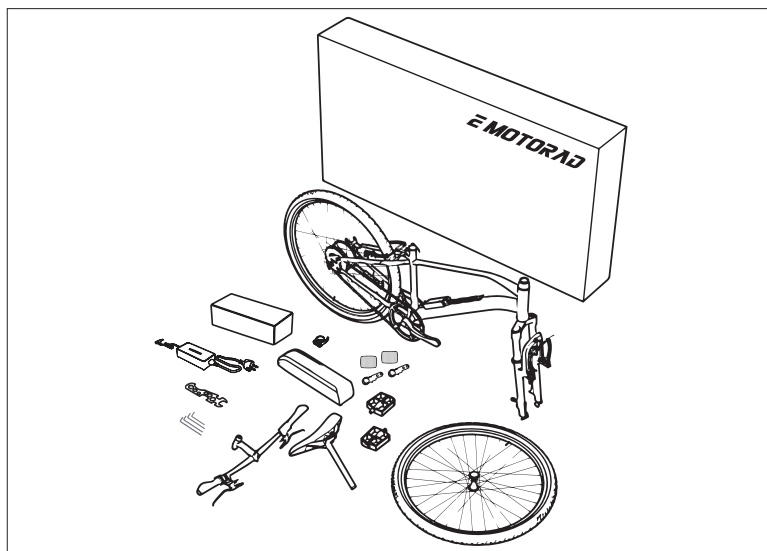



- Insert the handlebar stem into the steerer tube of the fork, and use a 6mm allen key to tighten it. Ensure the handlebar is straight for perfect alignment.

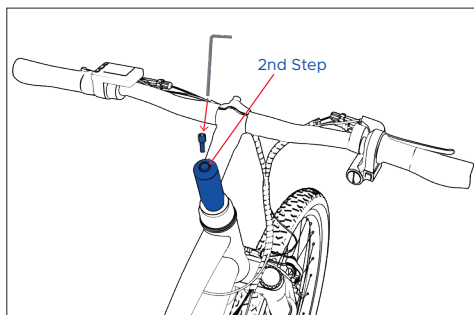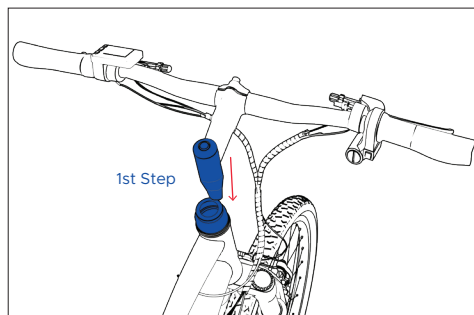



- For this step, you'll need a friend to help lift the front of the e-cycle to install the wheel. Remove the brake bend pipe from the clamp, then insert the wheel and lock back the bend pipe. Since this is a bolt and nut axle, there are two parts: the washer with the hook and the bolt.

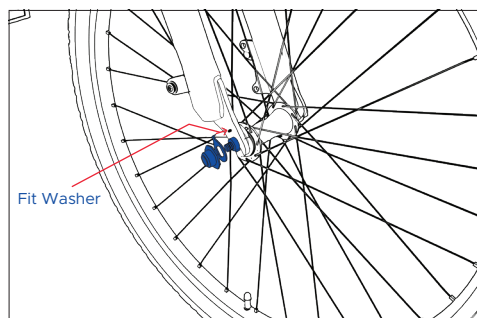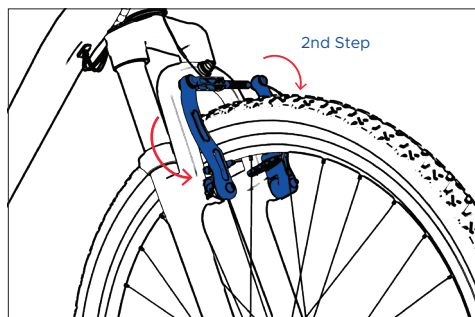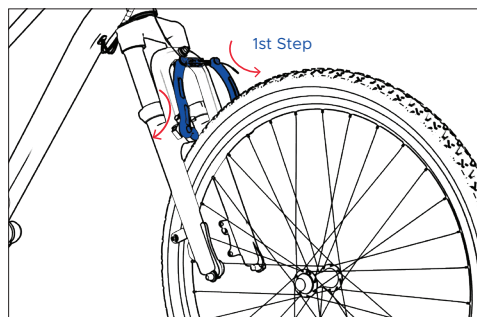


- Adjust the seat to be level with your hip height. Insert the seat post and tighten the clamp.

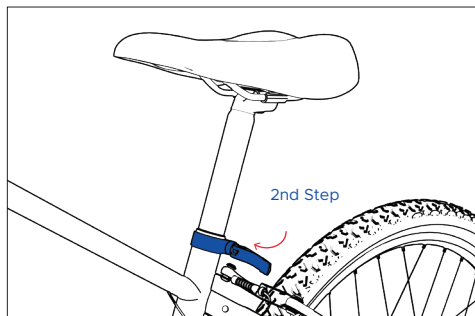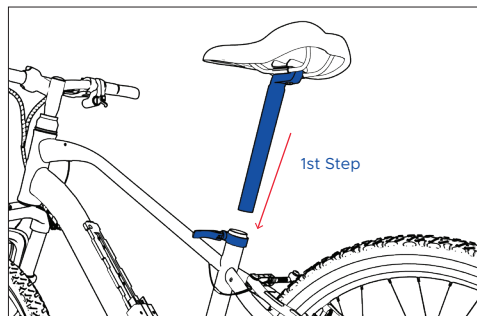

- ▶ Installing the pedals is straightforward. Use the 15mm wrench provided in the toolkit.
- ▶ For your convenience, the pedals are marked "Left" and "Right". Note that the left pedal tightens anti-clockwise, while the right pedal tightens clockwise.

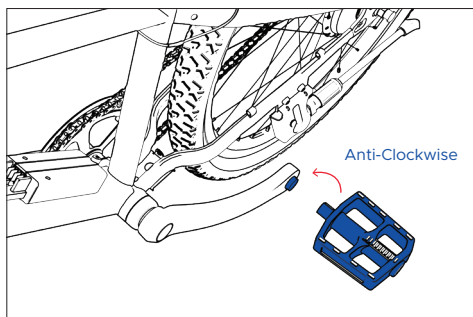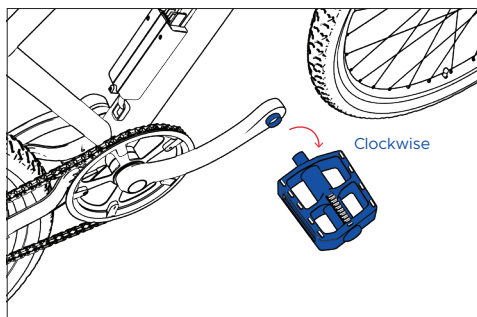

- ▶ Securely place the battery onto the controller, ensuring it is firmly fixed. Then insert the battery key and lock it in place, and press the switch to activate the battery.

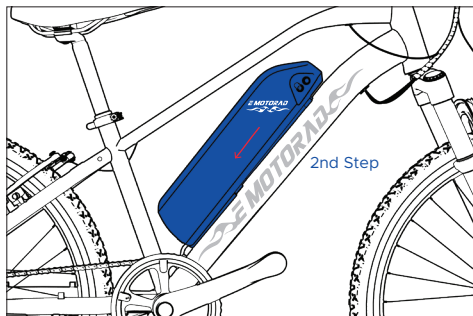

Your Dope e-cycle is now assembled and ready to ride!

FEATURES



STAY INFORMED

The Dope e-cycle has a top-notch Cluster C2 display that is easy to use and shows real-time riding data. It also shows the battery status, so you always know how much power you're left with. With 5 different riding modes, you can control the way you ride. Whether you're commuting or exploring new trails, the Cluster C2 display keeps you informed and in control of your e-cycle experience.



KNOWING PEDAL ASSIST

The pedal assist feature on the Dope makes e-cycling easier and more fun. It offers three levels of assist, so you can save battery power or get extra support for uphill rides. It adapts to your needs, giving you a mix of traditional cycling and modern convenience. This way, you can choose how much electric assistance you want and enjoy a ride that suits you perfectly.



REMOVABLE BATTERY

Experience extended rides, hassle-free. With a 5.2Ah removable battery, you will always have enough power for long, breezy rides. And if you run out of charge? No worries there, either! The battery is designed to be portable and lightweight, and can be carried along to charge anywhere like a smartphone. Charge anytime, anywhere with ease, allowing you to get back on the road faster and hassle-free. Furthermore, its compact size ensures it fits seamlessly into the e-cycle's frame, maintaining a sleek and stylish appearance.



HIGH-PERFORMANCE MOTOR

Feel the power of the 250-watt motor, delivering smooth and robust performance. It's engineered to provide optimal assistance, making uphill climbs and long-distance rides easier and more enjoyable. The motor operates quietly, ensuring a peaceful and pleasant riding experience. Whether you're navigating city streets or exploring off-road trails, the 250-watt motor offers the perfect balance of power and efficiency.





HIGH-QUALITY TYRES

Experience durability and reliability with the Dope's 24" x 2.1" Nylon tyres. Whether you're commuting in the city or exploring rugged trails, the high-quality tyres offer exceptional grip and stability, enhancing your overall cycling experience.



THROTTLE

Take full control of your ride with the Dope's throttle feature. The throttle allows you to effortlessly accelerate without pedalling, providing an extra boost when you need it. Perfect for those moments when you need a quick start or want to take a break from pedalling, the throttle enhances convenience and versatility. Whatever terrain you're on, the throttle ensures a smooth and enjoyable ride.



INTERNAL CABLE ROUTING

Experience a cleaner, more streamlined look with the Dope's internal cable routing. By housing cables inside the frame, this design not only enhances the e-cycle's aesthetic appeal but also protects cables from damage and dirt, ensuring they last longer and perform better. Internal cable routing minimises maintenance and maximises performance, providing a sleek and modern riding experience.



SUPERIOR BRAKING

Safety and reliability are at the forefront with the Dope's Alloy V-brakes with an auto cut-off system, which immediately disengages the motor when the brakes are applied, providing an extra layer of safety. Whether it's a sudden stop in traffic or a quick halt on a steep descent, it provides superior braking performance and control, enhancing your overall riding experience.

CARE FOR YOUR E-CYCLE

To ensure the longevity and optimal performance of your e-cycle, regular maintenance and proper care are essential. This guide provides practical tips and recommendations to help you keep your e-cycle in top condition. From cleaning techniques to lubrication tips, we've got you covered. Read on to learn the best practices for maintaining your e-cycle and ensuring a smooth, enjoyable ride every time.



REGULAR CLEANING

- ▶ **Wipe Down:** Regularly clean your e-cycle with a damp microfiber cloth to remove dirt, dust, and debris. Avoid using high-pressure water, as it can damage electrical components.
- ▶ **Frame Cleaning:** Use a frame cleaner solution to clean the frame for a thorough cleanse.
- ▶ **Chain Maintenance:** Clean and lubricate the chain regularly to prevent rust and ensure smooth operation. Use a chain lubricant for best results.
- ▶ For a more thorough maintenance, consider cleaning your e-cycle every 300-500 km.



BATTERY CARE

- ▶ Only use the charger provided by EMotorad.
- ▶ Store the battery in a cool, dry place away from direct sunlight and heat sources.
- ▶ Avoid storing the battery at full charge or completely empty for extended periods.
- ▶ Periodically check the battery's charge level and top it up to around 60-80% if not in use for an extended period. This helps maintain battery health.
- ▶ If your e-cycle gets caught in the rain, use a cloth to wipe down the battery and wait for it to dry before reconnecting it to the e-cycle.
- ▶ Do not touch the battery terminals.
- ▶ Turn off the battery when not in use.
- ▶ The battery should not be difficult to attach or remove. Do not force it to avoid damage or injury.
- ▶ If the battery has trouble charging, discontinue charging and contact EMotorad immediately.
- ▶ Only grab the charger by the plug (not the cable) when plugging and unplugging.





BRAKE MAINTENANCE

- **Inspection:** Regularly inspect brake pads for wear and tear, and replace them when necessary.
- Ensure that the brake lever does not touch the handlebar when fully engaged. If it does, please contact our helpline for assistance.



TYRE MAINTENANCE

- **Pressure Check:** Check tyre pressure regularly and maintain it within 35-45 PSI. Proper tyre pressure ensures better traction and ride comfort.
- Replace tyres if they show signs of damage or significant wear and tear. Keep in mind that different types of terrains affect the tyres differently.



ELECTRICAL COMPONENTS

- **Connection Check:** Periodically check all electrical connections and wiring for any signs of wear and tear, damage, or loose connections.
- **Display and Controls:** Ensure the display and control buttons are clean and functioning correctly.
- Avoid using the e-cycle in rainy conditions to maintain optimal conditions.



STORAGE

- **Indoor Storage:** Store your e-cycle indoors in a dry, cool place to protect it from natural elements.
- **Long-Term Storage:** If, in case, you're storing your e-cycle for an extended period, clean it thoroughly, charge the battery to around 60-80%, and then place it in a cool, dry place.
- Keep the tyres inflated even when the e-cycle is not in use to prevent wear and tear.



DISPLAY CARE




- **Cleaning:** Use a soft, dry cloth to gently wipe the display. Avoid using harsh chemicals or abrasive materials that could scratch the screen.
- **Avoid Extreme Temperatures:** Do not expose the display to extreme temperatures, as this could affect its functionality.
- **Regular Inspection:** Periodically check the display for any signs of damage or malfunction. If you notice any issues, contact EMotorad for assistance.

OPERATING THE BATTERY

Your Dope e-cycle comes with a 36V 5.2Ah Li-ion battery, with a unique set of keys to keep it LOCKED/UNLOCKED to the frame. This section provides instructions on how to charge and maintain the battery effectively, without breaking a sweat.

BATTERY POSITIONS:


- **Battery Placement:** Slide the battery over the controller and insert the key in the designated slot on the side of the battery. Then, turn the key clockwise to lock it in place.
- **Battery Removal:** Insert the key into the same battery lock and turn counterclockwise to unlock. Then, slide the battery out of the frame.
- **Turning the Battery ON:** Press the button on the side of the battery to turn it ON. The battery is now locked to the frame, and the power is active.
- **Turning the Battery OFF:** Press the button again to turn the battery OFF. The battery is locked to the frame, but the power is not active.

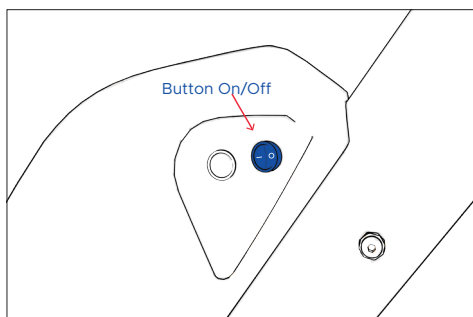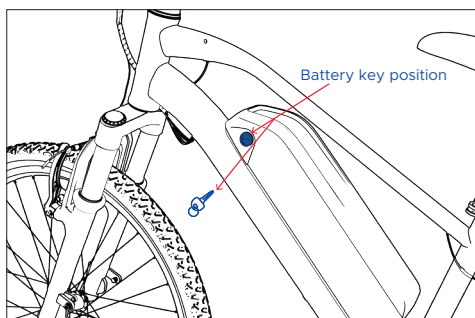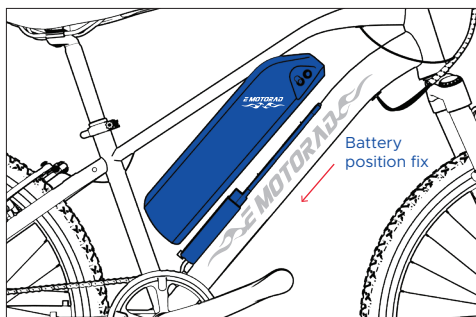

CHARGING YOUR BATTERY

Locate the charge port on the side of the battery. You can charge the battery while it is attached or detached from the e-cycle.

- **Initial Charge:** The battery comes with a charge between 20-60%. Plug in the charger to ensure the battery is fully charged before your first ride.
- **Charger:** Use only the provided EMotorad charger.
- **Charging Indicators:** The charging indicator light is red while charging and turns green when charging is complete. Charging takes approximately 2-3 hours if the battery is mostly empty.
- **Safety:** Ensure no dirt, debris, or flammable items are near the charger and battery. Avoid leaving the charger plugged in when the battery is fully charged.
- Do not charge the battery if it is damaged, excessively hot, leaking, smells, or is discoloured.
- Store the battery indoors in a dry space, away from heat or flame sources and out of direct sunlight.

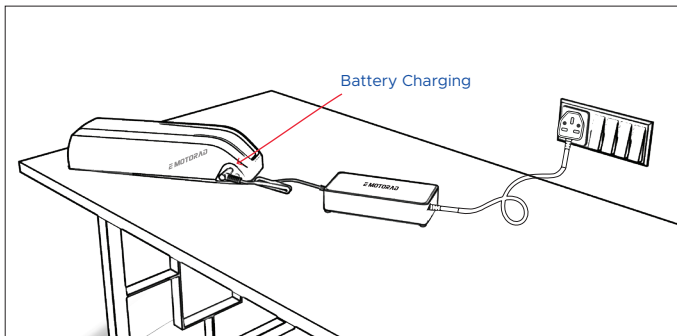

OPERATING THE DISPLAY

A Cluster C2 multi-functional display comes with your Dope e-cycle, providing a comprehensive dashboard with essential information about your rides, including speed, odometer reading, charge level, and more. The display allows you to toggle between various modes and adjust the Pedal Assist System (PAS) levels according to your preference. Below are some functions and operational instructions for the display.

FUNCTION	INSTRUCTIONS
 Turning the e-cycle ON/OFF	Hold the POWER button until the display turns ON; repeat to turn OFF
 Increase Pedal Assist Level	Press the up arrow button
 Decrease Pedal Assist Level	Press the down arrow button
 Turn ON/OFF front light	Hold the up arrow button for 3 seconds until lights turn ON; repeat to turn OFF
 Toggle Odometer, Trip, Voltage	Press and let go of the POWER button

Note: The trip ODO records the distance of each trip. This value resets when the e-cycle is powered off. When the e-cycle has not been used for 10 consecutive minutes, the display will automatically shut down. When the display is turned off, the pedal assist, throttle, and all electronic systems will stop working.



RIDING MODES

CRUISE MODE

After switching on the display, use the throttle to set the e-cycle in motion. Once it reaches a favourable speed, press the '▼' button for 3 seconds, and the cruise mode will be activated.

WALK MODE

After switching ON the display, keep the e-cycle stationary or in motion while walking alongside it, with the throttle disengaged. Then press and hold the ‘▼’ button for 3 seconds to activate walk mode.

THROTTLE MODE

After switching on the e-cycle, twist the throttle on the right side of the handlebar to activate the Throttle Mode.

Note: Remember, the PAS level must be set to at least level 1 to use throttle mode.

PEDAL ASSIST MODE

After switching on the display as mentioned, you can use the ‘▲’ and ‘▼’ buttons to set the level of the pedal assist between 1 to 3. With 1 being the lowest and 3 being the highest.

PEDAL MODE

You can ride conventionally by simply changing the pedal assist to zero or switching off the display and using the pedals to propel yourself.

ERROR CODES AND TROUBLESHOOTING

The Dope e-cycle features an advanced error code system to help identify and troubleshoot issues effectively. Each error code corresponds to a specific problem, providing a clear indication of what needs attention. By understanding these codes, you can quickly diagnose and address any issues, ensuring your e-cycle remains in optimal condition for a safe and enjoyable ride. Consult this section for guidance on interpreting error codes and performing necessary troubleshooting steps.

STATUS CODE	DISPLAY ERROR CODES
E06	Battery Under Voltage
E07	Motor Failure
E08	Throttle Malfunctioning
E09	Controller Failure
E10	Communication Reception Failure
E11	Communication Dispatch Failure

Reach out to the service team once the error is discerned through self-initiated troubleshooting.

A NOTE ON WEAR AND TEAR

Some components of your e-cycle are subject to wear and tear due to their function. While this is natural, the rate of wear and tear depends on the care and maintenance of your e-cycle as well as on the way of your usage. Kilometres travelled, rides in the rain, dirt, and gravelly terrains all affect the condition of your e-cycle. If the e-cycles are left standing out in the open often, they may be subject to increased wear and tear through weathering.

Some components require regular care and maintenance. Yet, sooner or later, they will reach the end of their service life, depending on the conditions and intensity of use. Parts that have reached their limit of wear and tear must be replaced.

This applies to the following parts:

- › Chain
- › Grip coverings or bar tape
- › Chain rings
- › Sprockets
- › Pulleys
- › Housings and cables for brake & gear
- › Tyres, tubes and rims
- › Saddle covering (leather)
- › Brake pads
- › All bearings (Headset, Hubs, and Bottom Bracket)
- › Fasteners and washers

Caution: Do not use your e-cycle for high-strain cycling, such as competitive events or in hilly terrain, as this can lead to damage.

Note: Remember that the overall performance of your e-cycle will be affected by the condition of its specific components. Please ensure that you are not straining any component excessively, carrying out regular maintenance checks and adhering to the replacement suggestions provided in this manual. For any doubts, contact your dealer or any other expert immediately.

PERIODIC SERVICE CHECKLIST

For a safe and smooth ride



Checkpoints	1 st Service	2 nd Service	3 rd Service
Full Bike Wash	✓	✓	✓
Brake Tuning	✓	✓	✓
Gear Tuning	✓	✓	✓
Wheel Truing	—	✓	✓
Hub Service (Front Wheel)	—	—	✓
Chain Check & Lubrication	—	✓	✓
Headset Service	—	—	✓
Full Cycle Cleaning & Degreasing	—	✓	✓
Drivetrain Service	—	—	✓
Nut & Bolt Tightening	✓	✓	✓
Tyre Inspection	—	—	✓
Electronics Checkup* (including Motor & PAS)	—	—	✓

*Electronics can be inspected during the 2nd service if needed.

BEFORE EVERY RIDE

☒ Check Brakes

☒ Check Tyre Pressure

☒ Conduct Drop Test
(to check for loose bolts)

☒ Check Battery Charge

☒ Secure All Cables & Electronics

WARRANTY COVER



EMOTORAD WARRANTY POLICY

At EMotorad, our first guiding principle is "The Rider is the Boss". We stand behind the products that we sell. For this reason, we're pleased to offer one of the industry's most generous and rider-friendly warranty policies.

REPAIR OR REPLACEMENT OF COMPONENTS

IMPORTANT!

To validate this warranty, the retail customer must register the e-cycle at **www.emotorad.com** on the day of delivery.

- ▶ We stand behind our frames. This means we offer a five-year warranty to the original owner against structural defects in material or workmanship on Steel EMotorad frames.
- ▶ Specified EMotorad-branded products, as well as frame paint and graphics (excluding accidental or deliberate damage), are covered by a one-year warranty.
- ▶ This warranty is limited to the original purchaser only. Proof of purchase is required to validate the warranty. Transport costs are not included.
- ▶ We offer a 1+1-year warranty on the motor and battery, and a 12-month warranty on the controller from the date of original purchase.
- ▶ The battery warranty does not include damage from power surges, use of non-original chargers, improper maintenance, or water immersion.
- ▶ Accessories (for example: helmet, wire lock, pump) are not covered by this warranty policy.

Only use this product in accordance with this user manual. EMotorad offers a warranty on the following items.

Register on the day of delivery to claim your free 1+1 year warranty on the battery.

Scan the QR code



10



Mainframe (High Tensile Steel Alloy)	Five years
Motor shell, Hub motor	1+1 year
Controller	One year
Battery	1+1 year
Electronic handlebar controls and electrical connections, Battery Charger*	Six Months
Paintwork (excluding accidental or deliberate damage)	One year
Lights and lighting system	Six Months

- All Mechanical parts are only covered for Manufacturing Defects. There is no warranty period on handlebars, stem, bearings, drivetrain parts, v-brakes, wires, wire housings, tyres, tubes, rim or wheels, hubs, seat or saddle, seat post, clamps, grips, headset parts, pedals, bottom bracket, brake pads, mudguards and any additional accessories with the e-cycle.
- Display, Throttle, LED Light, Pedal Sensor, Charger come with a 6-month warranty.

If any manufacturing defect(s) is found in our product, the company will repair or replace the defective part(s) with new part(s) or equivalent at no cost, provided the product is within 1 year of the warranty period and the malfunction is caused due to faulty material or workmanship during manufacturing. The decision to replace or repair the defective part will rest solely with the company. We also reserve the right to replace the defective part with parts similar to or different to the defective part, as per the availability of such parts.

TERMS & CONDITIONS

1.	If the product has a quality fault within 25 days of delivery, the part will be repaired or replaced.
2.	The period of assurance shall commence from the day delivery was made to the retail customer, or from the day the retail customer collected the e-cycle from the retailer.
3.	To validate this warranty, the retail customer must register their e-cycle on the day of delivery.

All parts that have been replaced under warranty must be returned to the Company and will become the Company's property. Parts replacement will be subject to below terms & conditions:

-
- The Company or its authorised dealers will repair or replace only the parts that are failing due to faulty material.
 - Only the Company or its authorised dealers can repair, service or assemble/reassemble the Product, and it shall be the responsibility of the customer or purchaser to bring the faulty Product to our dealer premises.
 - This warranty does not cover corrosive parts, plastic, PVC and rubber components or the accessories adding to the decorative value of the Product.
 - A photocopy of the sales invoice and the serial number of the Product have to be shared with the Company.
 - The battery used in the Product is a special application battery, meant only for the specific model of the product. Do not use it for any other application or product.
 - The Company reserves the right to change or withdraw any or all terms of the warranty policy without any prior intimation.
 - All Products should be periodically checked as per the recommended service timeline, by our authorised dealer for indications of potential failures, including cracks, wire damage, corrosion, dents, deformation, paint peeling and any other indications of potential problems, inappropriate use or abuse. These are important safety checks and very important to help prevent accidents, bodily injury to the rider and maintain the productive life cycle of a Product.
 - Since Lithium-ion batteries have the tendency to self-degrade, mileage per charge will reduce with ageing.

This warranty is not applicable in any of the following conditions:

- If any repair work is carried out privately or by any unauthorised dealer or personnel, or irregular maintenance.
- Damage resulting from misuse, not maintaining the e-cycle or not following the guidelines within our user guide or using the e-cycle for any kind of competitive sport.
- Failure to register the e-cycle on the day of delivery.
- Spare parts and components are worn in normal use.
- Any special equipment or accessories added by the customer with the intention to enhance the performance, speed or comfort of the Product are not included in this warranty. In the event of any such alteration or addition, the warranty will stand null and void.
- If a photocopy of the sales invoice is not received with the defective Product, the warranty will be counted from the date of manufacturing till the defined time period as mentioned.
- Fading of parts like paint, stickers and plastic parts due to direct exposure to sunlight is not covered under the warranty.

-
- Any tampering with the parameter settings in the display.
 - Adhering to the Periodic Service Checklist is mandatory to retain warranty benefits. Failure to do so will void the warranty.
 - This warranty is void in its entirety by any modification of the frame, fork or components. This warranty is expressly limited to the repair or replacement of a defective item and is the sole remedy of warranty. This warranty extends from the date of purchase only to the owner and is not transferable. Transportation costs and labour charges incurred in the replacement of parts are not covered under this warranty.
 - The Company is not responsible for loss or damage whatsoever (including incidental or consequential damages) arising from the use of the Product. Any claims under this warranty must be made through an authorised dealer.
 - The warranty stands null and void if :
 - The serial number /identification code is deleted, defaced, altered, effaced or removed.
 - Used for more than the permissible load of 80kgs.
 - Used for stunts, competition or jumping, acrobatics, bicycle motocross, dirt biking or similar activities, as not all units are designed or intended for such purpose or usage.
 - Any kind of tampering observed with the parts/product.
 - Modified/altered components for any specific use other than personal transport.
 - Transportation, delivery, labour and handling charges incurred in the replacement of parts are not covered under this warranty and shall be borne by the customer.
 - This warranty is void in its entirety by any modification of the frame, fork or components.
 - Resold to any other person/company.
 - Damage is caused by an accident or malfunction, or misuse of the Product by the acts of persons, intentional or otherwise, including but not limited to misuse or mishandling, fire or any act of God.
 - Non-functional parts due to natural wear and tear, ageing, defects resulting from misuse/improper handling or negligence by the rider or Product is altered by substitutional component parts are not covered under the warranty.

➤ Misuse of the battery includes, but is not limited to:

- Intentional or accidental damage, such as punctures, cracks, or exposure to impact forces.
- Signs of tampering, such as opening or modifying the battery pack.
- Exposing the battery to extreme temperatures (hot or cold) beyond recommended ranges.
- Rough handling, improper storage, or neglect can lead to battery failure.
- Operating the battery in systems or applications not recommended by the manufacturer.
- Repurposing the battery for other equipment without the manufacturer's approval.
- Using or storing the battery in excessively humid, wet, or dusty environments.
- Submerging the battery in water or exposing it to unprotected liquids.
- Intentional short-circuiting of the positive (+ve) and negative (-ve) terminals.
- Attempting to repair or modify the battery by unauthorised personnel.

This warranty is valid only within the geographical boundaries of the Republic of India. The company reserves the right to change this warranty policy at its sole discretion without any notice. In case of any dispute with the customer, the courts of Mumbai, Maharashtra, India, shall have exclusive jurisdiction to settle any dispute.



SHIPPING DAMAGE CLAIMS

Immediately inspect whether the packaging is intact when receiving the product. If you see obvious damage to the product, you can choose to reject it and contact us in time. We will not accept claims for shipping damage later than 24 hours from the receipt of the product.

WARRANTY REGISTRATION




HOW TO REGISTER?

Registering your EMotorad Dope e-cycle for warranty is a simple and essential step to ensure you receive the best support and coverage for your new purchase. Follow these easy steps to complete your warranty registration:


- Find the frame number of your e-cycle. It is typically located on the frame, near the crankset or on the rear of the e-cycle.
- Ensure you have proof of purchase, such as a receipt or invoice, which includes the date of purchase and the retailer's information.
- Go to the EMotorad official website and navigate to the 'Warranty Registration' section. You can find this under the 'Assurance' section on the website.
- Complete the online registration form with your full name, contact information (email address and phone number), e-cycle model and frame number, select source of purchase, and invoice number, and upload a copy of your invoice file.
- Double-check all the information you have entered to ensure accuracy. Once you are confident everything is correct, submit the form.
- If you encounter any issues during the registration process or if you do not receive a confirmation email within a reasonable timeframe, please contact EMotorad customer support at **contactus@emotorad.com** or call **+91 8686050590**.

By registering your EMotorad Dope e-cycle, you ensure that you are protected under our warranty policy and can enjoy peace of mind while riding.

Thank you for choosing EMotorad!

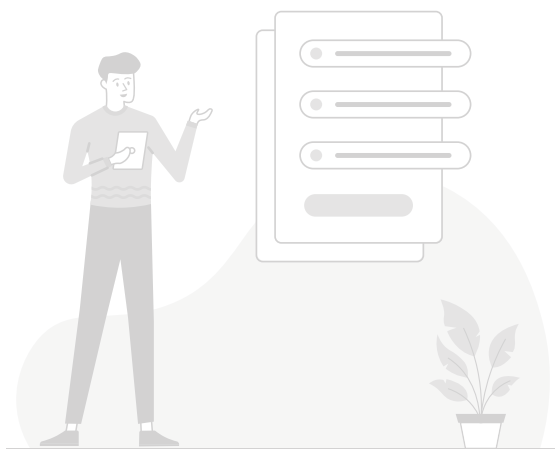

E-CYCLE RANGE

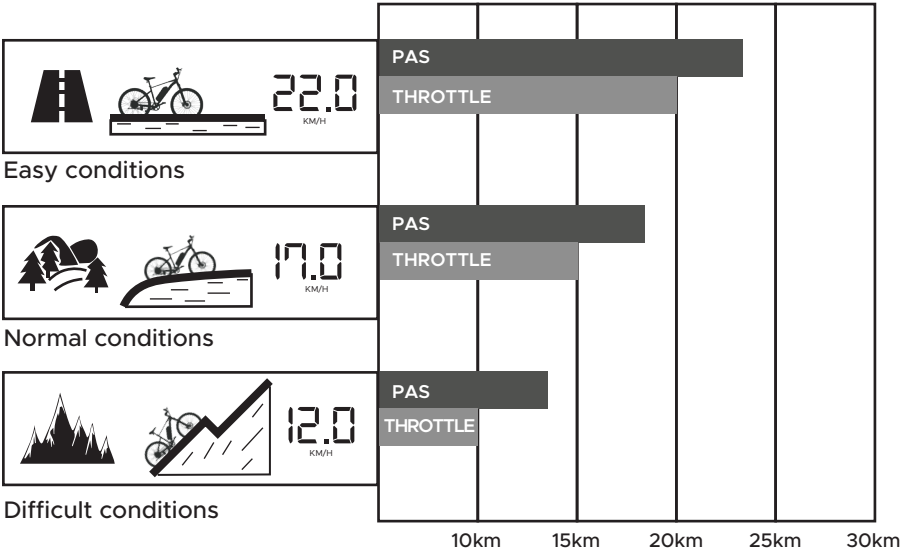

*The above-mentioned range is subject to vary depending on rider weight and other conditions.
**The PAS varies from 1 to 3 levels. At each level, the range output will change accordingly.

SAFETY GUIDE

Thank you for choosing the Dope. Your safety is our top priority.

IMPORTANT NOTICE

This manual is intended to promote safe usage of your e-cycle for you, other road users, your vehicle, surrounding property, and the environment.

Please note:

- ▶ The content of this manual may be updated without prior notice.
- ▶ The manufacturer assumes no responsibility for any errors or omissions in this document.
- ▶ Reproduction, distribution, or unauthorised use of this document or its contents is strictly prohibited without written consent.

USAGE GUIDELINES

Before using your Dope, read this manual thoroughly to ensure proper operation and safety. Keep the manual in a secure location for future reference. Improper use or handling of the e-cycle may lead to injury or damage. The manufacturer is not liable for harm caused by misuse or failure to follow the guidelines in this manual.

SAFETY SYMBOLS

DANGER

This symbol indicates a hazardous situation which, if not avoided, will cause serious injury.

WARNING

This symbol indicates information that, if ignored, could possibly result in personal injury or even death due to incorrect handling.

CAUTION

This symbol indicates information that, if ignored, could possibly result in minor or moderate personal injury. It may also alert against unsafe practices.

CAREFULLY OBSERVE THE FOLLOWING INSTRUCTIONS:

PROTECTIVE GEAR

WARNING

Always wear a certified helmet, gloves, and appropriate riding attire. This ensures your safety while riding.

CHECK BEFORE YOU RIDE

WARNING

Conduct a pre-ride check:

- Ensure tyres are properly inflated.
- Confirm the battery is securely mounted, locked, and fully charged.

AVOID OVERLOADING

WARNING

Do not exceed the maximum weight capacity of 80kg, including the rider and any cargo.

CAUTION

Dual sitting is not recommended. The rear carrier (if available with the product) is designed only to hold goods and is not intended to support a second passenger.

BATTERY HANDLING

DANGER

- **DO NOT** connect the positive and negative terminals directly; this can cause a short circuit
- Keep the battery away from high temperatures, heating equipment, and fire
- Avoid exposing the battery to water, salty, acidic, or alkaline liquids, and do not use it in the rain
- **DO NOT** disassemble the battery.
- Store the battery in a cool, dry place. If not used for an extended period, recharge it monthly.
- Use only the EMotorad-recommended charger.

WARNING

DO NOT disassemble any battery component. Unauthorised tampering voids the warranty and may cause injury or damage.

CONTROLLER HANDLING

WARNING

- Protect the controller from rain, water, or any liquids to avoid short circuits or damage.
- **DO NOT** disassemble the controller. Unauthorized tampering voids the warranty and may result in damage or injury.
- Keep the controller clean and dry. Wipe it gently with a dry cloth and avoid aggressive cleaning agents.
- **DO NOT** use a pressure washer

ELECTRONICS HANDLING

(Motor, Throttle, Lights, Display, Control Panel, Harnesses, etc.)

WARNING

Protect all electronics from heavy rain, water, or liquids to prevent short circuits or damage

DO NOT disassemble any electronic components. Unauthorised tampering voids the warranty and may cause injury or damage.

Keep electronics clean and dry. Wipe dust and dirt gently with a dry cloth; avoid harsh cleaning products.

DO NOT use a pressure washer.

EM



www.emotorad.com

For General Enquiries
+91 8686050590 | contactus@emotorad.com

For Service Related Queries
+91 8956248161 | service@emotorad.com